8x32mm, Point 'n View 8.0MP, Binoculars and Camera
Quick Start Manual

- Requires 4 – AAA Batteries
- SD Card - Maximum 16GB

Software Installation: Using Windows XP/Vista follow Manual instructions

Important: Software not comparable with Windows 7; however you can use the SD Card to download/transfer pictures to your PC.

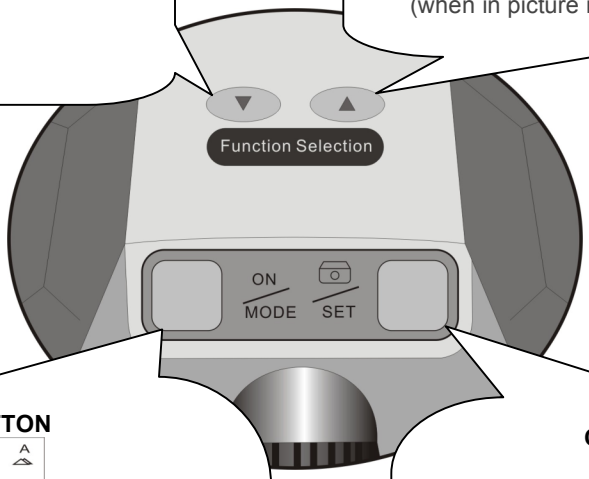

FUNCTION SELECTION

1. Scroll Down arrow
2. Reduce image zoom
   (when in picture mode)

FUNCTION SELECTION

1. Scroll Up arrow
2. Enlarge image zoom
   (when in picture mode)

ON / MODE BUTTON

Press 3-5 sec. to Turn ON

Click Camera/Set Button to take Picture

1 Click [Picture Mode]
2 Clicks [Video Mode]
3 Clicks [Preview Photos/Video]
View Photo/Video:
a) Use Function Selection to Scroll Up/Down
b) Select Photo or play Video by Clicking Camera/Set
4 Clicks [Main Screen]

Hold for 3-5 sec. to Turn OFF

CAMERA / SET BUTTON

Click to take Picture

Press for 3 Sec. [Menu Options]
Use "Function Selection" to Scroll Up/Down]

To Select Option
a) Click Camera/Set button
b) Use Function Selection arrow to select from Options
c) Click Camera/Set button to make Changes
d) Press for 2 Sec to Exit Menu Options